


With proper installation, the maximum recommended weight for doors is 200 pounds.
www.stoneharborhardware.com


7

CHOOSE WHICH FLOOR GUIDE SET YOU WANT TO INSTALL.

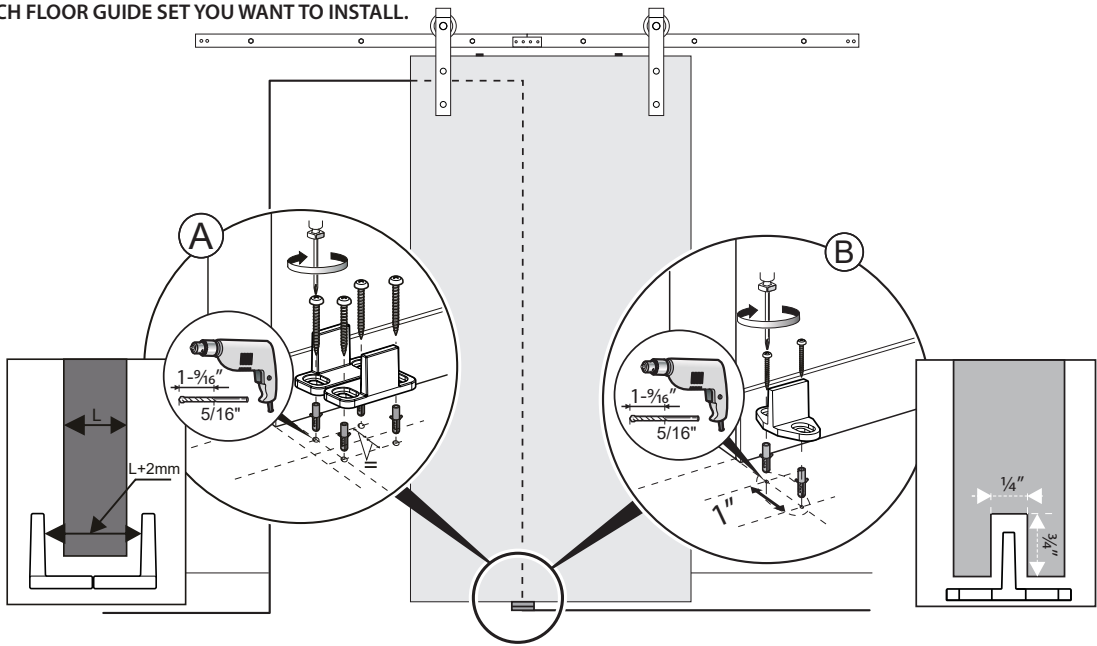

8

INSTALL
AND
ADJUST
THE TRACK
END STOPS.

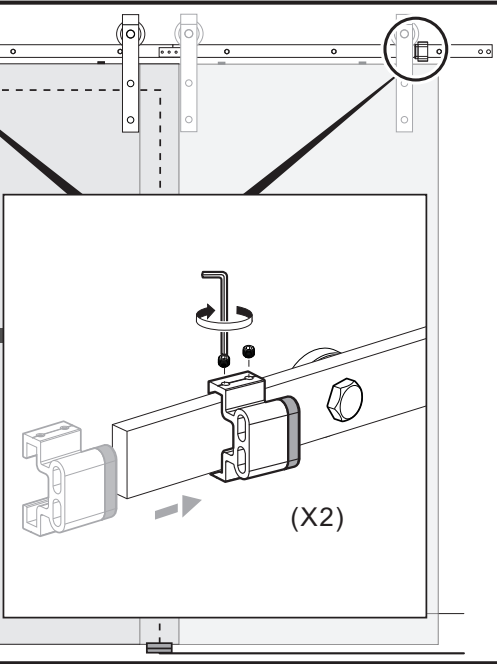

9

(X4)

INSERT THE PROVIDED PLUGS INTO THE HOLES AT THE END OF THE TRACK.

